




IMPACT MANUAL

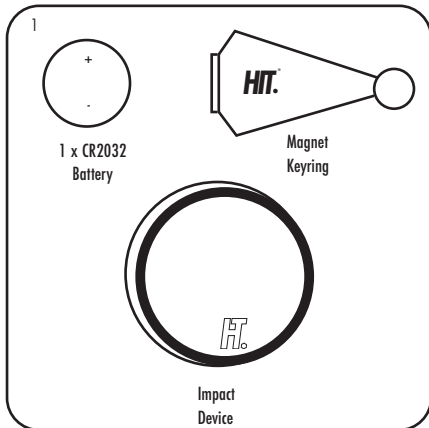


EN: Included in pack: 1 x CR2032 Battery, 1 x Magnet Keyring, 1 x IMPACT Device

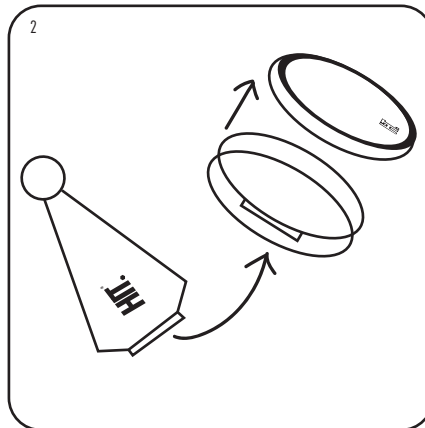


EN: To open Device use a finger nail to prise device seal apart. If you find this difficult use the small edge on the Magnet keyring to do this.

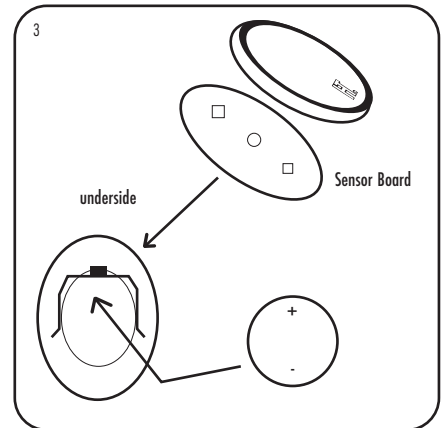

EN: Battery placed on underside of device board. Providing power to the unit.

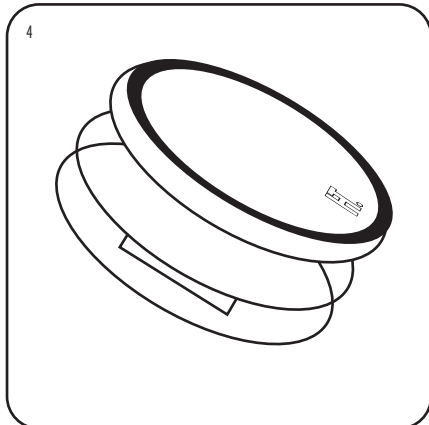


EN: Push device back together with finger and forethumb (you may need to use both hands). The device is sealed when the top cap 'clicks' into place with the bottom cap. The device is now sealed and water resistance.

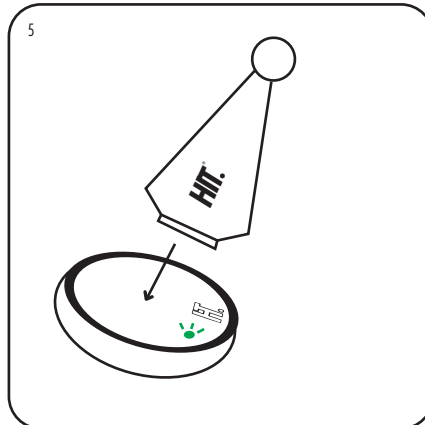


EN: To turn on device, Tap the magnet to the screen of the IMPACT device. A quicker tap is more efficient in opening the switch. The device will flash green to confirm ready state.




EN: Open the HIT app on your android or iOS smartphone or tablet and follow the steps to connect your device via bluetooth. Rename it to your unique ID and click on Individual play to start recording.

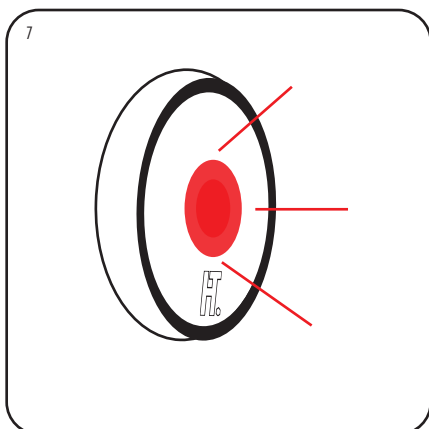

EN: Device will continue to record and store IMPACT data until you stop recording on app or turn off device. When device flashes RED the device has registered a G-Force impact over the threshold.

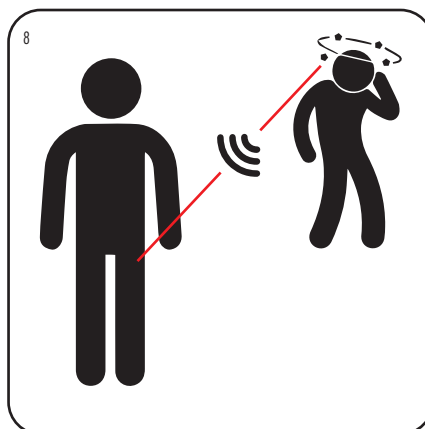

EN: The App will ping a notification and show alongside the Red light that the device has registered an above threshold impact. The wearer can be checked for any concussion symptoms at this point should they choose too.

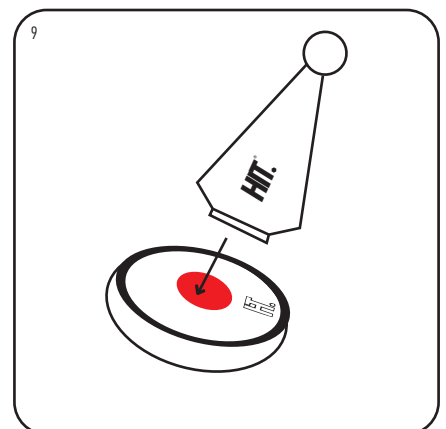

EN: To reset device after red light or to turn off device simply tap with magnet again and all lights will turn off. Your device is now in off state. To turn back on to continue playing simply follow from step 5.